

ATTENTION:

Always check that the ink roll holder is properly secured! After the inking system is closed, the labeling device is ready for operation.

IMPORTANT:

DO NOT re-ink the roller! Change it when it is necessary.

4. Faults and Causes

If the label transport is hampered, the printhead blocked, or no new label appears, please check:

- that the *Selector Knob* is pushed all the way in
- that **TimeMed** labels are being used
- if there are labels or residue of labels stuck in the gun, remove them carefully with tweezers.

ATTENTION:

If there are labels stuck in the *Label Guide*, open the cover and remove the label and residue.

If the print is faint, check the *Ink Roller* and its placement on the holder.

Maintenance and Cleaning:

Clean the printhead as necessary with a dry brush. Remove any sticky residue, labels, or parts of labels stuck in the labeling device with a pair of tweezers.

If you are still having problems, or need assistance with any part of the label loading process, please feel free to contact our **Technical Support Department** at 800-323-4840

TimeMed Labeling Systems, Inc.
www.TimeMed.com

144 Tower Drive
Burr Ridge, IL 60527
800-323-4840
630-986-1800

9566 Vassar Ave.
Chatsworth, CA 91311
800-382-3371
818-882-8463

2808 McGowan Street
Dallas, TX 75203
800-833-2533
214-943-4688

USE AND CARE

TXII®

LABELING DEVICE



1. To load label gun

Slide the new label roll into the *roll holder* until the label core snaps into place. (Fig A, No. 1) - *Labels should be placed into holder with the label side facing out.*

Simultaneously push both *base plate retaining knobs* towards the handle to open the *base plate*. (Fig. B, No. 1)

Feed labels behind the *print band* (Fig. B, No. 2) until they appear at the bottom of the labeling device. (Fig. B, No. 3)

Fig. A


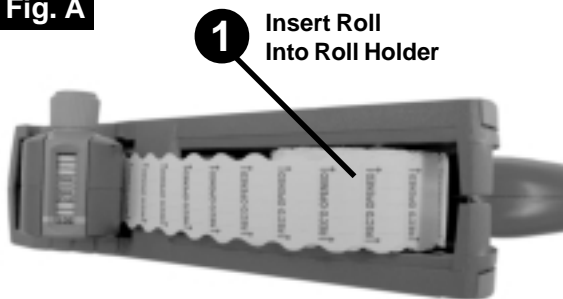



Fig. B

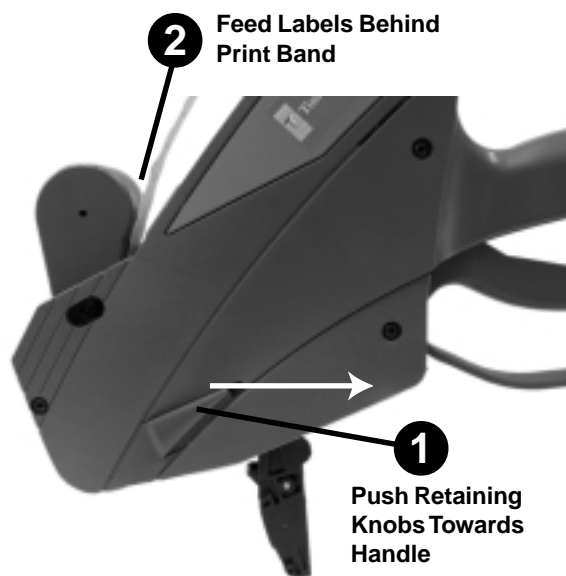

Pull out about 10 labels and close base plate until it clicks. **NOTE: The labels should be between the applicator roller and the base plate.** (Fig. C, No. 1)

Next, feed the labels under the **label guide** until they appear by the handle. (Fig C, No. 2) Pull labels out until loop in labels becomes taut. Finally, squeeze the handle lever repeatedly to tighten the labels and dispense the first printed label.

Fig. C

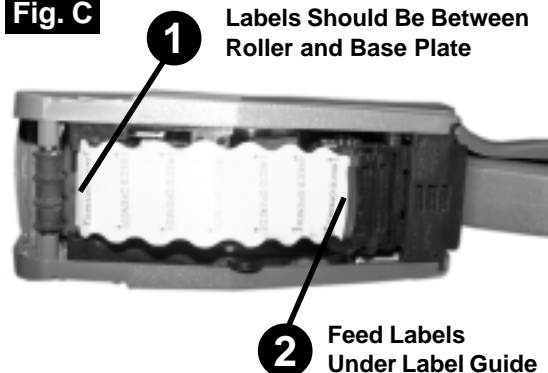


2. Setting the Print Bands

Pull the **selector knob** (Fig. D, No. 1) out to desired position shown by the **selector indicator** (Fig. D, No. 2). Turn the knob to get the desired digit. Select and dial individually for all code positions.

IMPORTANT: Selector Indicator Must Be Pushed Back In Before Operating the Labeling Device.

Fig. D

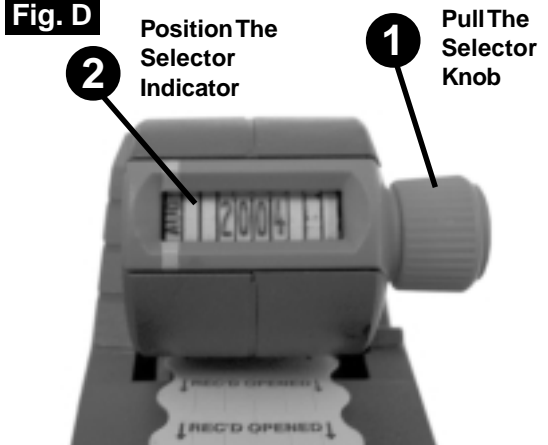

3. Changing the Ink Roller

Squeeze the handle to allow the ink roller to come forward. Pull the ink roller holder up, and over the front of the gun. (Fig. E, No. 1) - *you may now release the handle.*

Slide the gray ink roller holder off of the gun. Squeeze the sides of the ink roller holder together and allow the used ink roller to drop out. (Fig. E, No. 2)

To Insert the New Ink Roller: Remove the new ink roller from its packaging. Snap the new ink roller back into place in its bearings. (Fig. E, No. 3)

Fig. E

